




Installation manual

ACO Access Covers

SERVOKAT SMART



- |            |  |            |  |
|------------|--|------------|--|
| <b>ENG</b> | <b>Installation Manual<br/>ACO Access Cover</b>          | <b>EST</b> | <b>Paigaldusjuhend</b>                                     |
| <b>GER</b> | <b>Installationsanleitung<br/>ACO Schachtabdeckungen</b> | <b>LAV</b> | <b>Uzstādīšanas instrukcija<br/>ACO Tehnisko lūku vāki</b> |
| <b>FRA</b> | <b>Instructions d´installation</b>                       | <b>LIT</b> | <b>Montavimo instrukcija<br/>ACO apžiūros liukai</b>       |
| <b>ESP</b> | <b>Manual De Instalación<br/>ACO Tapas de registro</b>   | <b>POL</b> | <b>Instrukcja montażu</b>                                  |
| <b>POR</b> | <b>Manual de Instalação</b>                              | <b>BUL</b> | <b>Инструкции за инсталация</b>                            |
| <b>ITA</b> | <b>Manuale d´installazione<br/>ACO Access Cover</b>      | <b>HUN</b> | <b>Beépítési útmutató</b>                                  |
| <b>NLD</b> | <b>Installatiehandleiding<br/>ACO Toegangsluiken</b>     | <b>RUM</b> | <b>Instructiuni de instalare</b>                           |
| <b>CZE</b> | <b>Instalační manuál</b>                                 | <b>HRV</b> | <b>Upute za ugradnju</b>                                   |
| <b>RUS</b> | <b>Инструкция По Установке</b>                           | <b>SLV</b> | <b>Navodila za vgradnjo</b>                                |
| <b>SWE</b> | <b>Installationsanvisning</b>                            | <b>SRP</b> | <b>Preporuka za ugradnju</b>                               |
| <b>NOR</b> | <b>Installasjons Manual</b>                              | <b>TUR</b> | <b>ACO Müdahale Kapakları</b>                              |
| <b>FIN</b> | <b>Asennusohje</b>                                       |            |  |
| <b>DAN</b> | <b>Installationsvejledning</b>                           |            |  |








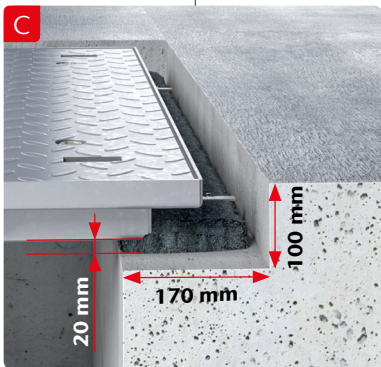
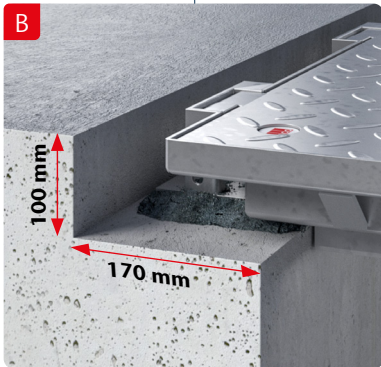
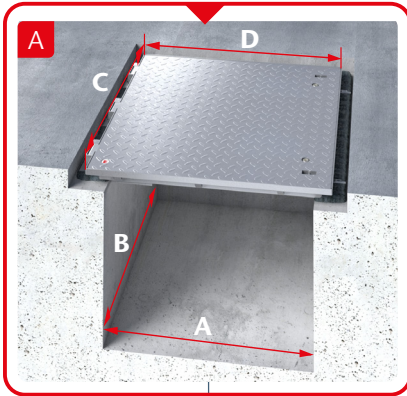





**Clear opening**      **External dimensions**

<b>(A x B)</b>	<b>(C x D)</b>
[mm]	[mm]
1000 x 1000	1241 x 1206
900 x 900	1141 x 1106
800 x 800	1041 x 1006
700 x 700	941 x 906
600 x 600	841 x 806
600 x 800	841 x 1006
600 x 900	841 x 1106
800 x 1000	1041 x 1206
1000 x 1500	1241 x 1706
900 x 1200	1141 x 1406
1000 x 1200	1241 x 1406

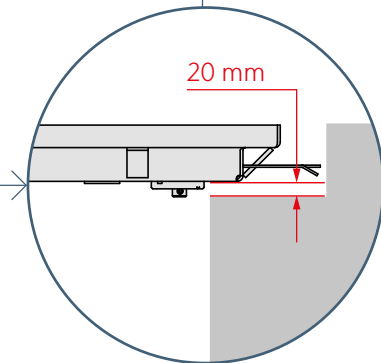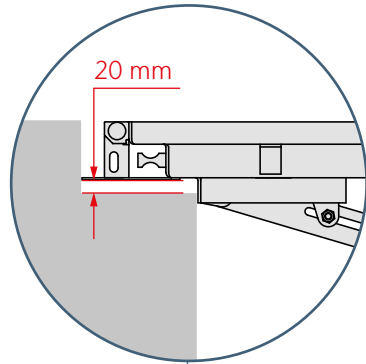


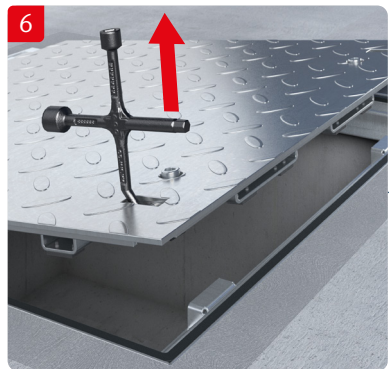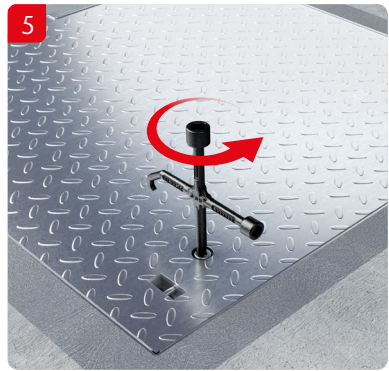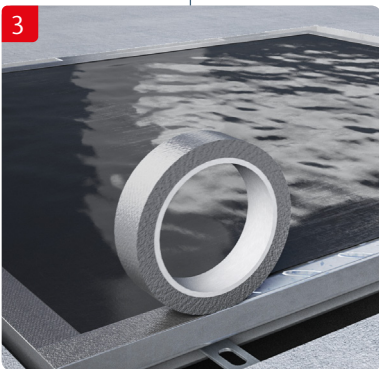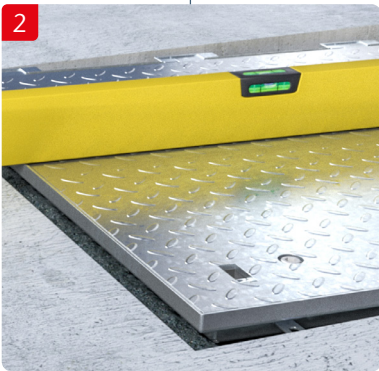


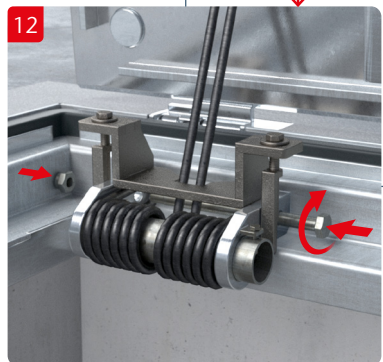
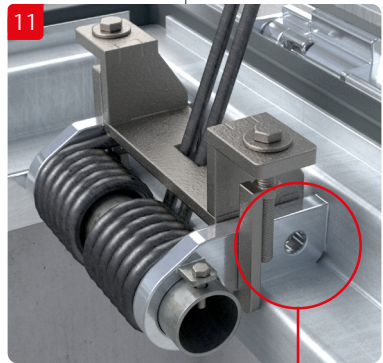
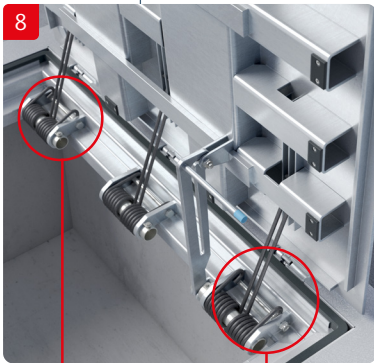
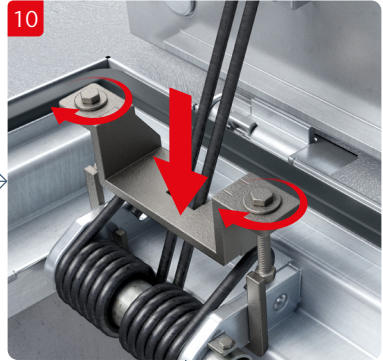


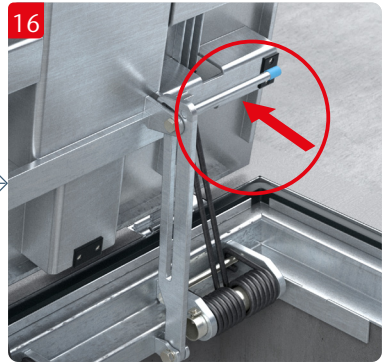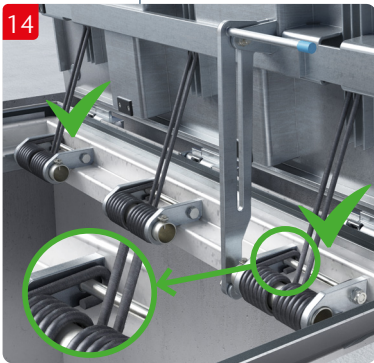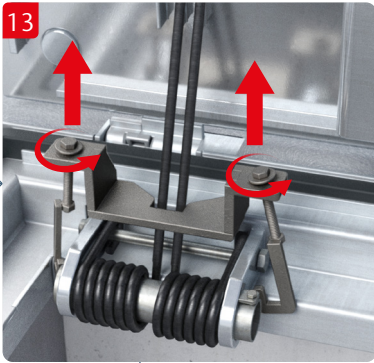

Installation manual  
ACO Access Cover SERVOKAT SMART

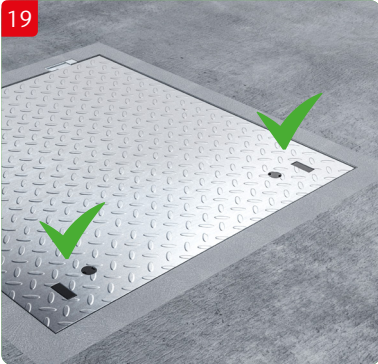



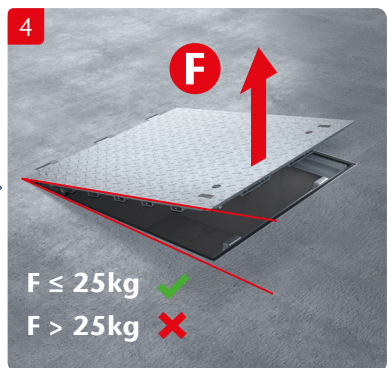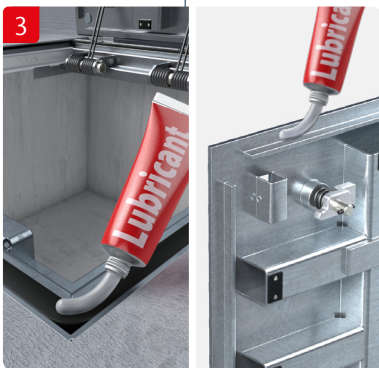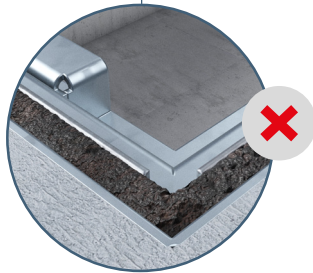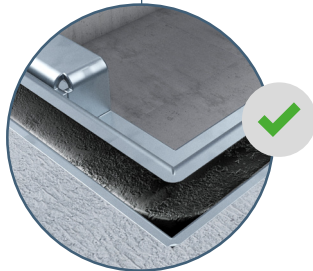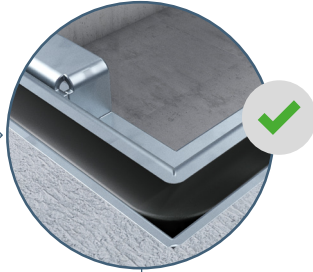

ACO. we care for water



Every ACO product supports  
the ACO WaterCycle



- 
- ACO Access SERVOKAT SMART SS
  - ACO Access SERVOKAT SMART GS
- 



ACO Industries k.s.

Havlickova 260  
582 22 Pribyslav  
Czech Republic

[www.aco-accesscovers.com](http://www.aco-accesscovers.com)

NM120725 ACO Access Covers SERVOKAT SMART GS/SS Manual/EN/Q3/23