
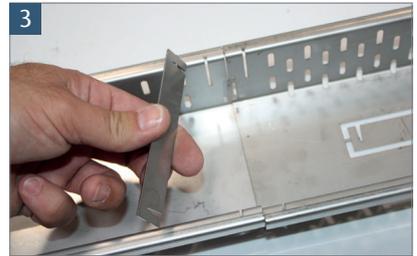
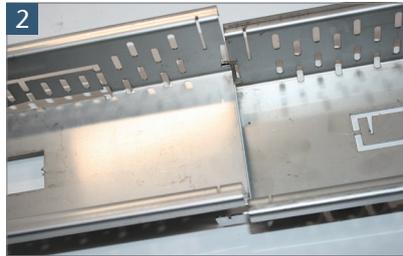


# ACO Self® Highline

## Installation instructions

### The channel connector as a bar and reinforcement

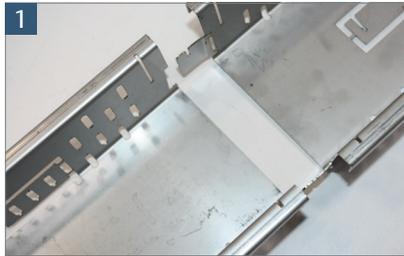


#### Caution channel bracing!


If the ACO Self® Highline is used in an area that can be walked on, 3 bolts per metre must be used. If the channel is not exposed to a load from above, no bars for reinforcement are required.

### The end cap

can be used from both sides and fixed with the channel connector.

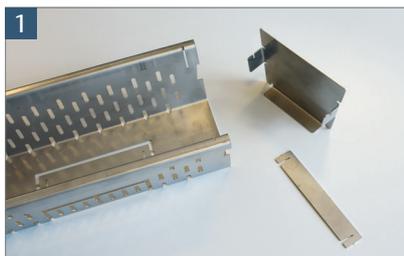

Bending before inserting the end cap

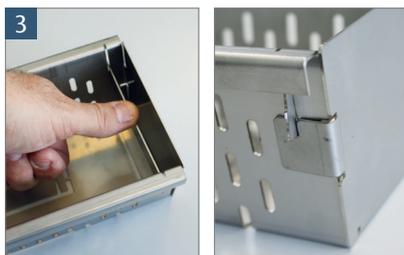

### ACO Hochbau Vertrieb GmbH

Neuwirtshäuser Straße 14, 97723 Oberthulba/Reith

Tel. 09736 41-60, Fax 09736 41-52

hochbau@aco.com

www.aco-hochbau.de

ACO. creating  
the future of drainage

